DO-IT-YOURSELF
INSTRUCTIONS FOR INSTALLATION OF SINGLE CYLINDER DEADLOCKS OR THE REPLACEMENT OF EXISTING LOCKS

TOOLS REQUIRED FOR REMODELING OR NEW CONSTRUCTION:

1 phillips head screwdriver
1 2" hole saw
1 1" drill
1 chisel

TOOLS REQUIRED FOR REPLACEMENT:

1 phillips head screwdriver

FOLLOW STEPS 6.7.8.9.10 FOR DO-IT-YOURSELF REPLACEMENT, FOLLOWING REMOVAL OF EXISTING LOCK.

REPLACING EXISTING DEADLOCKS:

Before beginning, measure from center of lock to door edge in order to check length of backset on existing lock to that of new lock. The backset length is stated clearly on front of package. If backset size is the same, continue; otherwise, you'll have to replace lock with proper size lock and backset.

INSTRUCTION FOR ADJUSTABLE DEADBOLT

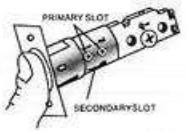

60mm(2-3/8")
70mm(2-3/4")

TO CHANGE 2-3/8" TO 2-3/4"
Thumb press the end of the latch, with the Adjustable Slot facing toward yourself, turn the body of the latch clockwise and make sure that **THE PIN DROP INTO THE SECONDARY SLOT, THEN PULL TO THE SIDE.** Twist the body of the latch counterclockwise **TILL THE PIN DROP INTO THE UPPER PRIMARY SLOT.**

1. MARK DOOR

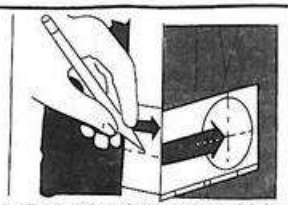

A. Fold and apply template to high edge of door bevel and mark center of door edge as indicated on template at the desired height from the floor.

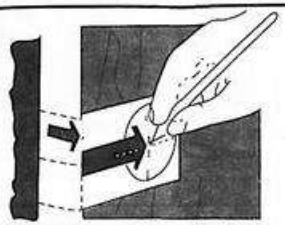

B. Mark center hole on door face through guide on template. For either 2⅜", 2¾" backset.

2. DRILL HOLES

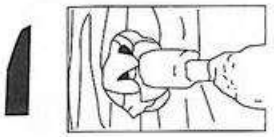

A. Drill thru door face as marked for lockset: It is recommended that holes be drilled from both sides to prevent splitting. Hole size is 2" for standard installations.

B. Drill 1" hole in center of door edge thru to 2" hole for latch.

3. INSTALL LATCH

A. Insert latch in hole, keeping it parallel to face of door. Mark outline and remove latch.

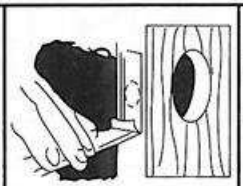

B. Chisel ⅛" deep or until latch face is flush with door edge.

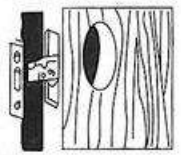

C. Install deadbolt latch in "up" position into hole as shown on latch. Insert and tighten screws.

4. INSTALL STRIKE

A. Close door against door stop. Insert edge of template against the flat side of latch bolt, and mark template at edge of door, jamb to locate strike opening. Move 3/8" toward door stop to locate center line for screws and 1"

B. Chisel 1/16" deep for strike matching 1" hole in door